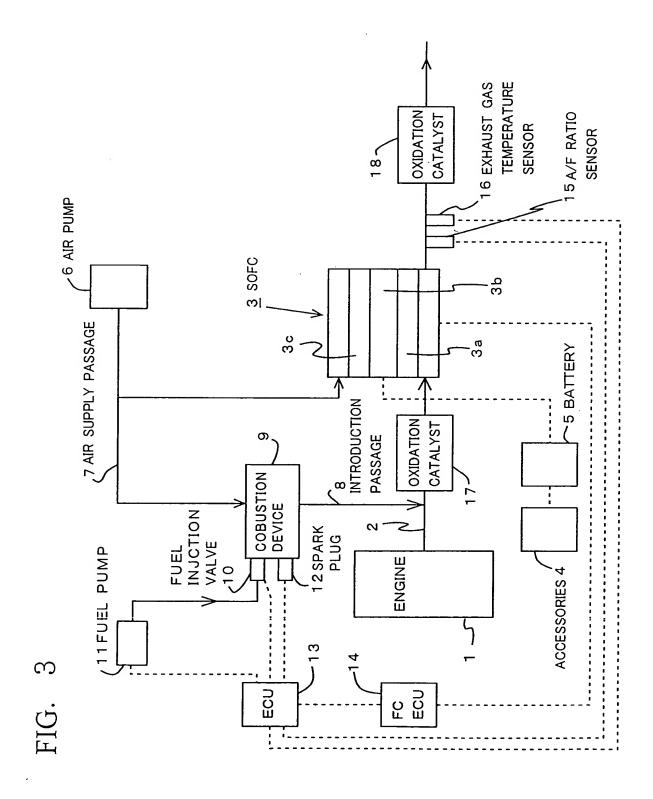
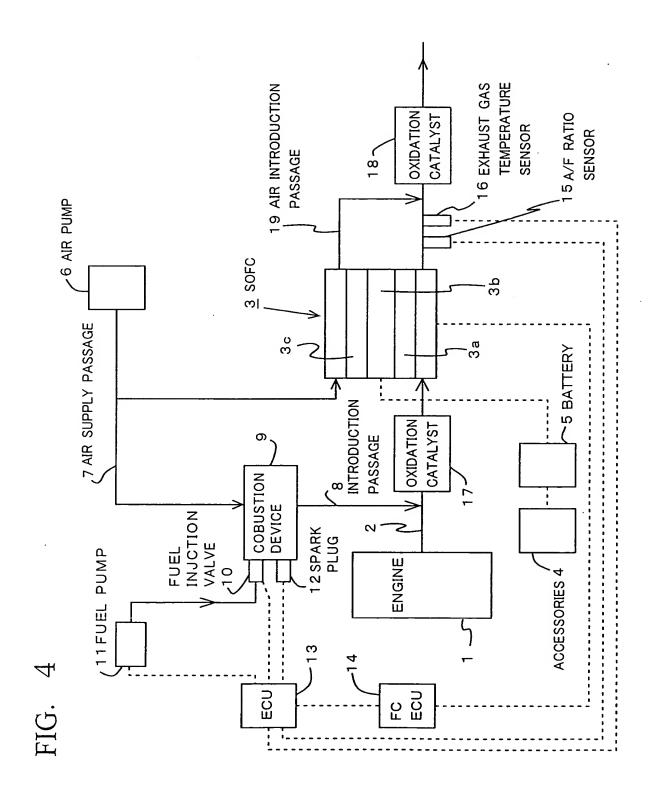
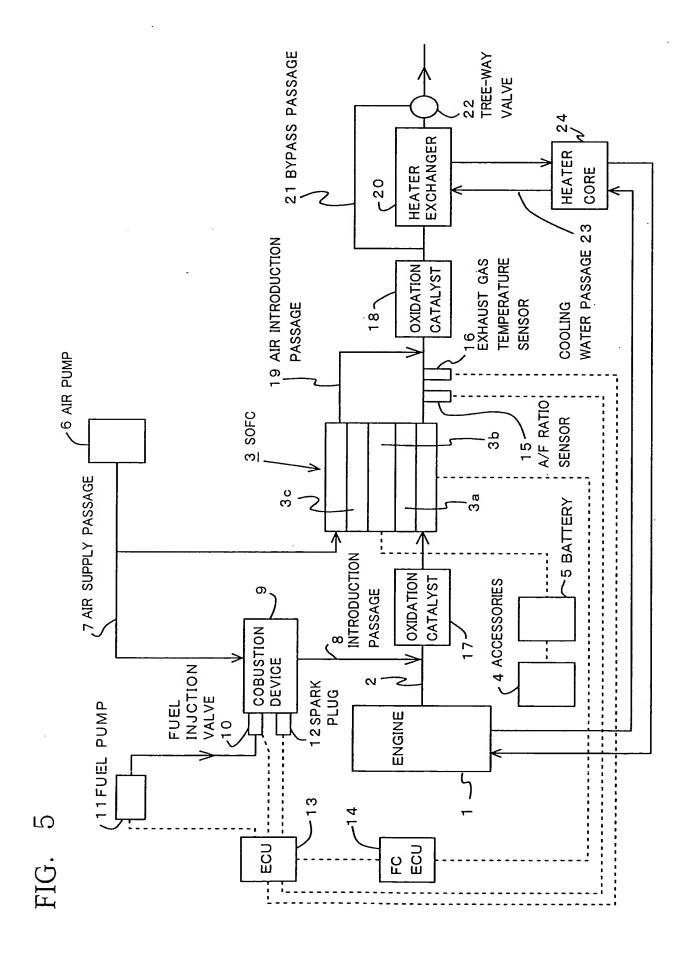
16 EXHAUST GAS TEMPERATURE SENSOR 15 A/F RATIO SENSOR 6 AIR PUMP 3 SOFC 36 ,7 AIR SUPPLY PASSAGE 30 **>5 BATTERY** A INTRODUCTION PASSAGE COBUSTION FUEL INJCTION VALVE 2 SPARK PLUG 11FUEL PUMP ENGINE ACCESSORIES 4 ECU FC ECU

TEMPERATURE SENSOR 6 EXHAUST GAS I 5 A/F RATIO SENSOR 6 AIR PUMP 3 SOFC 3p ,7 AIR SUPPLY PASSAGE ဗ **>5 BATTERY** 8 INTRODUCTION PASSAGE OXIDATION CATALYST COBUSTION DEVICE FUEL INJCTION VALVE 12SPARK PLUG 11FUEL PUMP ENGINE ACCESSORIES 4 FIG. 2 ECC FCU ECU









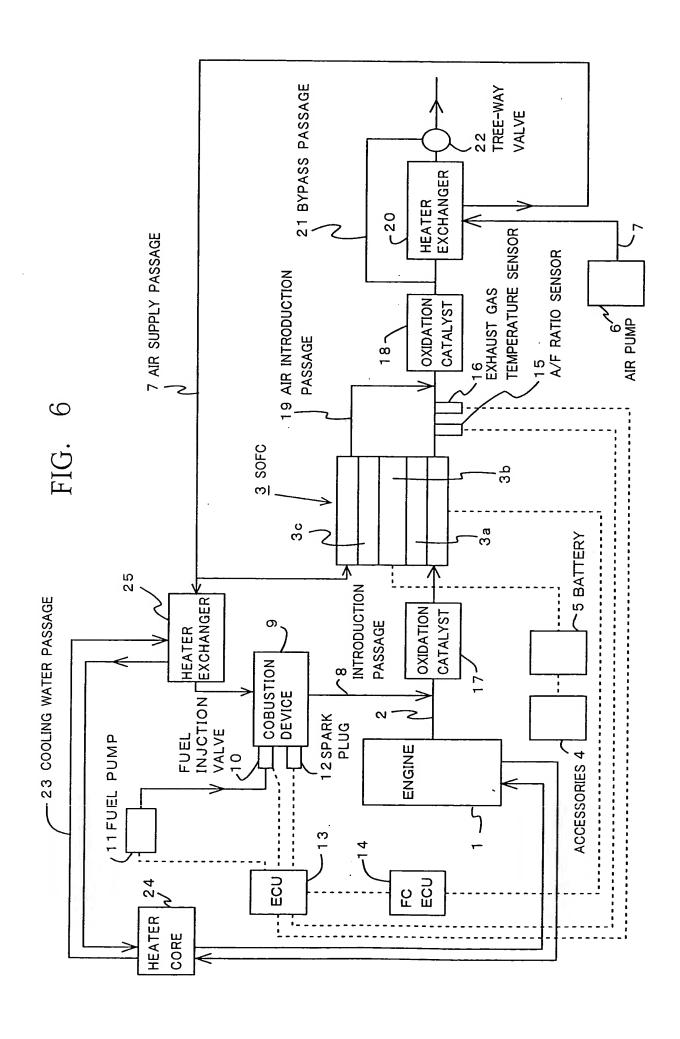


FIG. 7

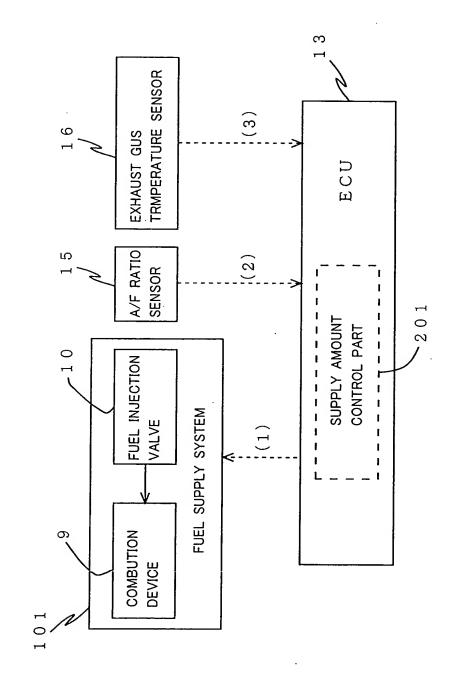

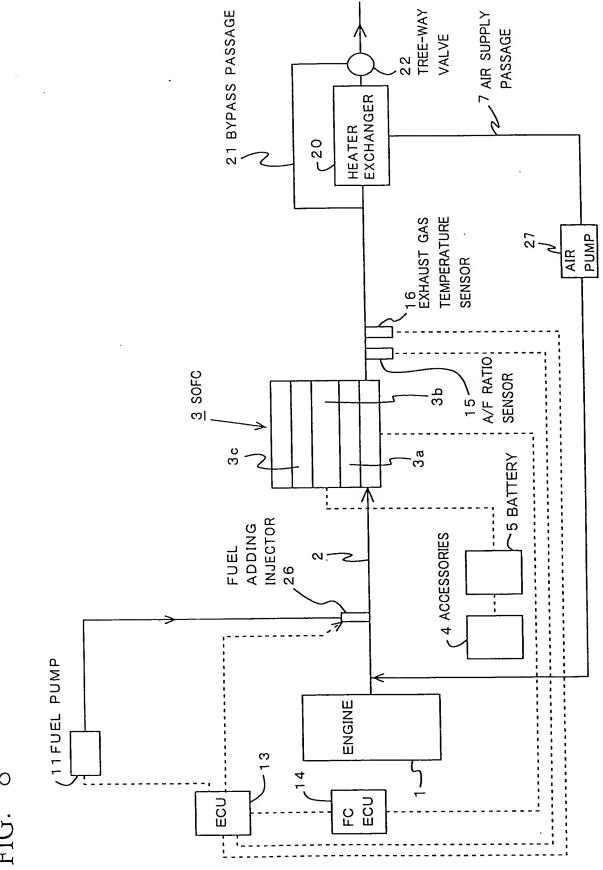

٨٠.

FIG. 8